

1 Close the processor switch.





Does the red light flash once(P1) or twice(P2)?

YES ✓

NO X

Replace Batteries

2 Place coil onto test device.

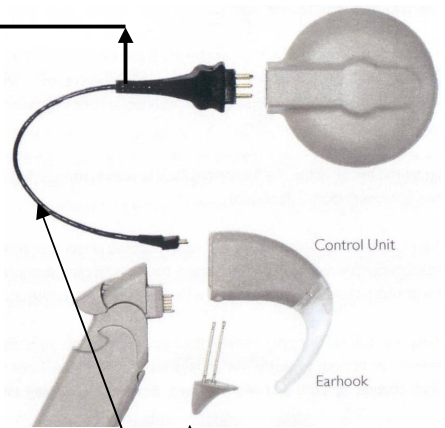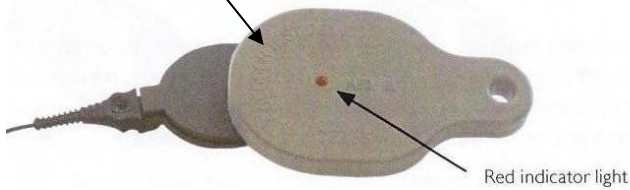


Does the test device light flash to voice:
 BAA-BAA-BAA =

YES ✓

NO

Replace cable

3

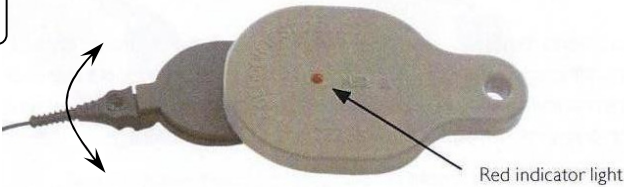

Does the Light stay on when cable is moved:
 BAAAAA =

YES ✓

NO

Processor is functioning correctly ✓